

Example of a thermostat characteristic curve for controlling the low  
temperature coolant volume flow rate



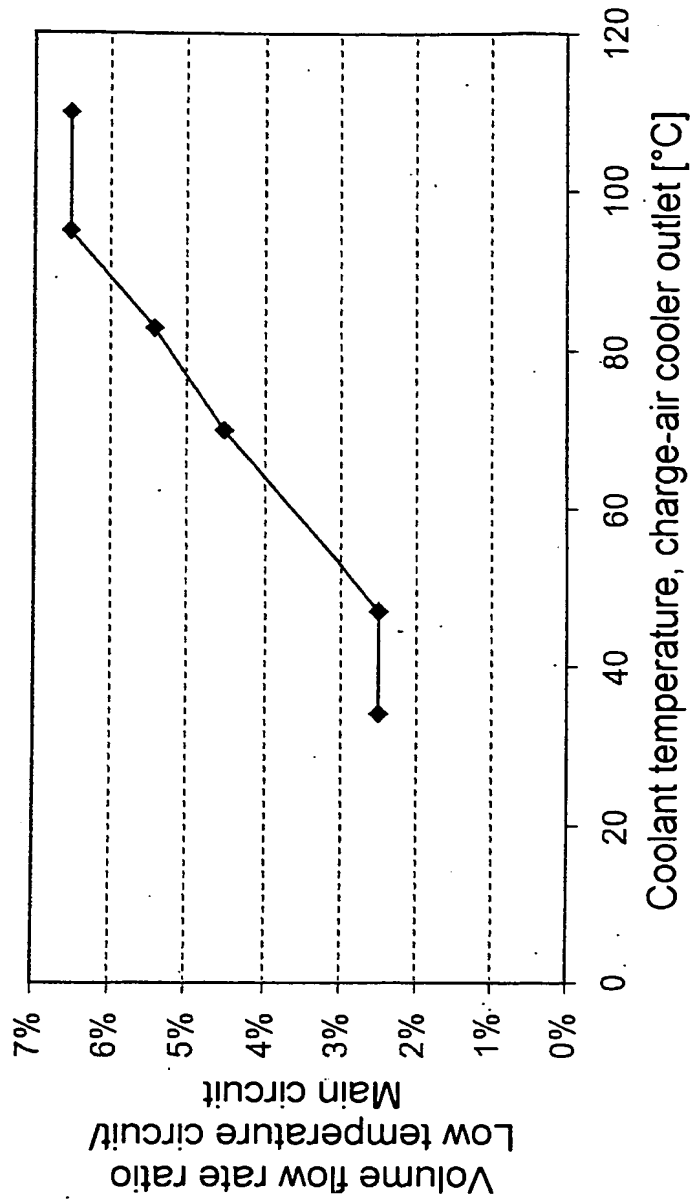


Fig. 2

3/7

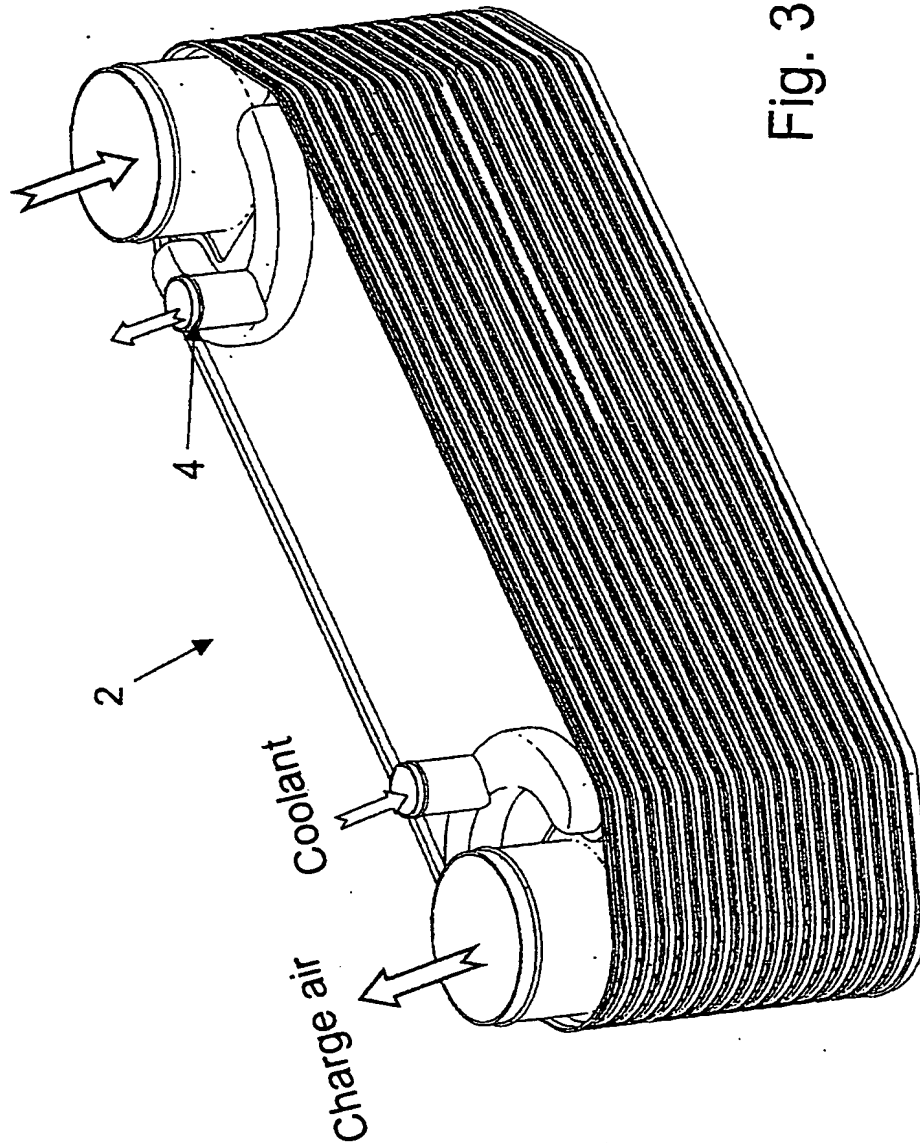

4/7

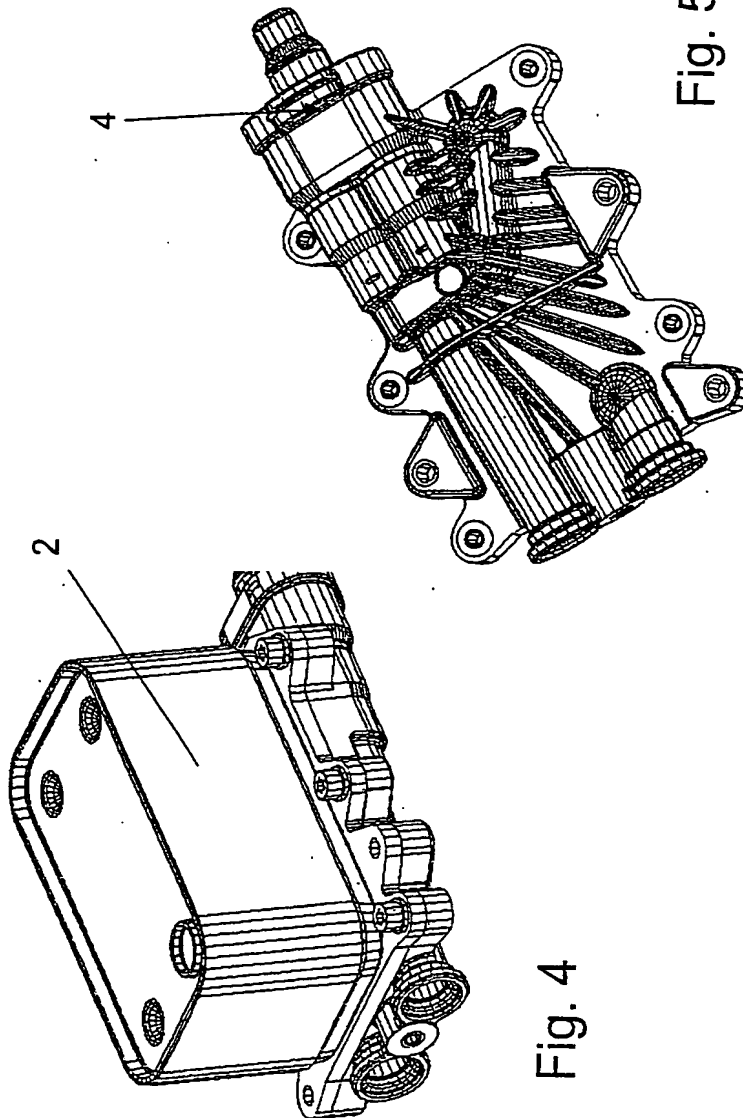

Optimum coolant volume flow rate, low temperature coolant,  
for different operating points


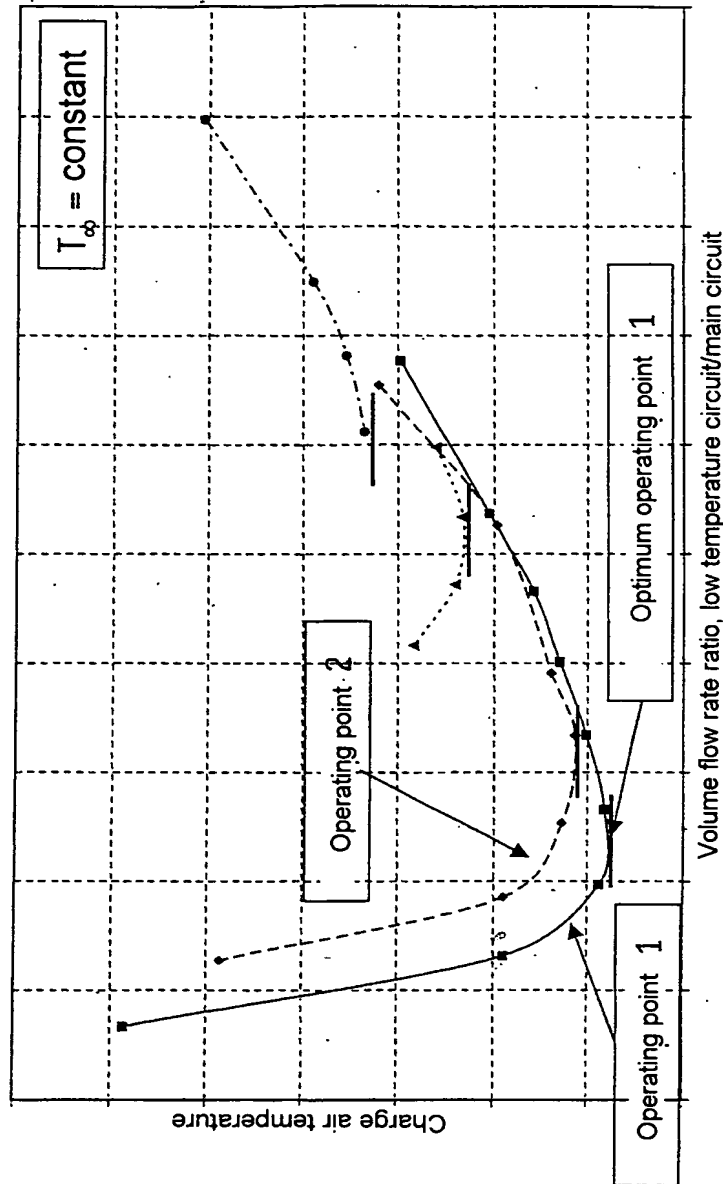


Fig. 6

6/7

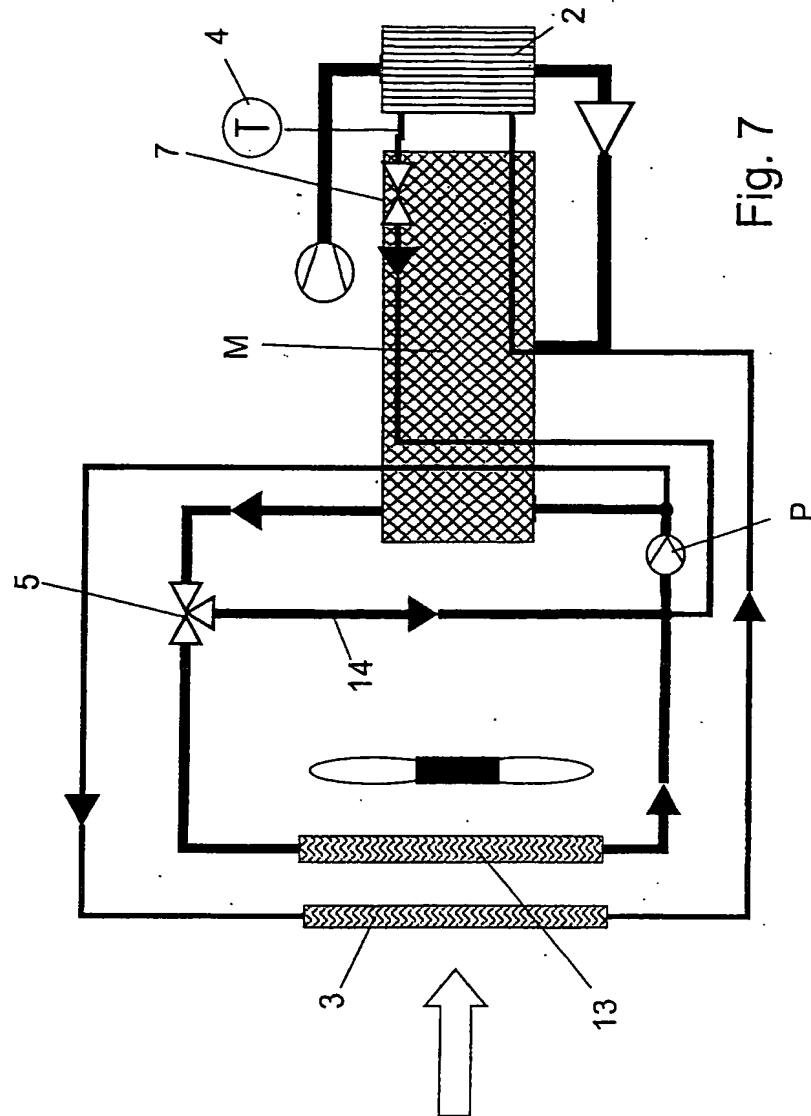

7/7

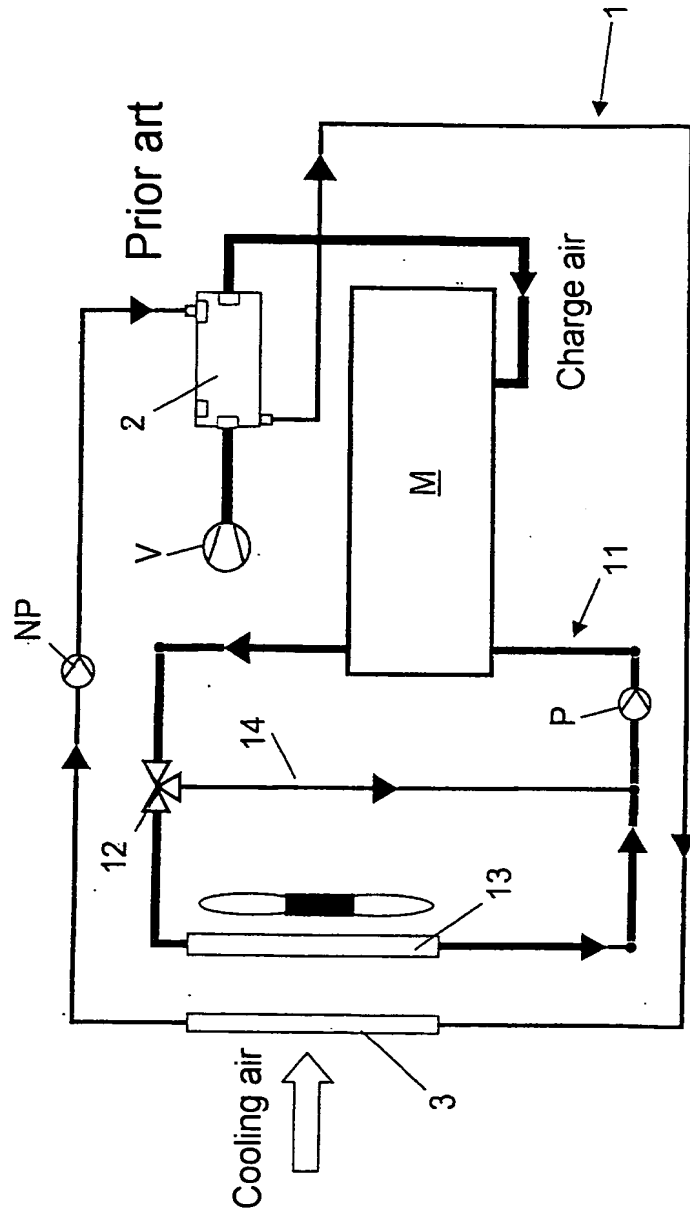


Fig. 8